



Setup Wizard is the tool for configuring SERVERware storage and initial setup of controller VPS and Web console GUI. Depending on license, wizard will setup and configure one of two types of SERVERware storage:

- **Standalone** - Two servers in redundant setup for storage and running VPSes
- **Farm** - Two servers in redundant setup for network storage. And processing hosts for running VPSes.

Initial Requirement

- *Two servers for storage with minimum 3 1GB or higher speed network ports.*
- *Each storage server must have at least two disks, one is for OS and all remaining disks will be used for setting up storage.*
- *Disks intended for storage must be similar or same in size on servers. Example: If you have 500GB and 1TB disks on one server for storage you need to have 500GB and 1TB disks on another server as well, so wizard can pair disks with same or similar size.*
- *Local Network (LAN) is for management and services. Other words you will manage SERVERware and bind VPSes to run services.*
- *Replication Network (RAN) is dedicated direct link between two servers for real time synchronization in RAID1 or RAID10 setup (depending on number of disks available).*
- *Installed Storage/Controller system using SERVERware live DVD/USB.*
- *Configured and connected LAN IP for access to Wizard.*

Additional Farm Edition Requirements

- *Storage Network (SAN)- Dedicated Gb switch for connecting storage servers with processing hosts for purpose of servicing VPS images over Open iSCSI protocol.*